

SMART CART RACK


INSTRUCTION & ASSEMBLY MANUAL



PART # 400-130-270A




www.prismfitnessgroup.com
303 Bruce St., Verona, WI 53593
608.845.8300
info@prismfitnessgroup.com

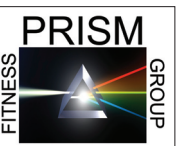

www.prismfitnessgroup.com
303 Bruce St., Verona, WI 53593
608.845.8300
info@prismfitnessgroup.com

HARDWARE:

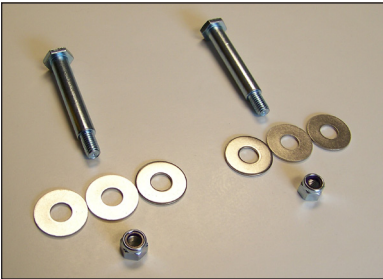

(2) 3" Wheel Bolts and (2) Nuts
(6) Wheel Washers



(1) Bag of Hardware that includes:
(4) 2" Carriage Bolts with washers/nuts
(4) 1 3/4" Carriage Bolts with washers/nuts



(1) Product Placement Card
(1) Zip-tie



(1) Base



(2) Uprights



(1) Top Rack




(2) Wheels

STEP 1

Slide the 3" Wheel Bolt through the wheel (from the outside)(Fig 1). Place three washers on the bolt on the inside of the wheel (Fig 2). Make sure the rounded edges of the washers are on the outer sides.

Add the wheel to the outside of the Base (Fig 3) with the wheel nuts. Be sure to put the bolt through the top hole on the base. Tighten nut using the 9/16 wrench while holding the bolt with the 3/4" wrench (Fig 4). Repeat the process to attach the second wheel to the opposite side.

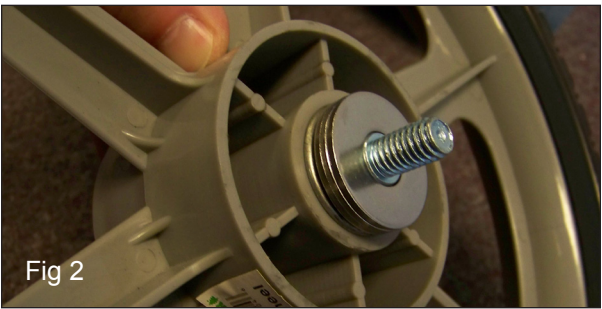

YOU WILL NEED:

- (1) 9/16 Wrench
- (1) 3/4 Wrench
- (1) 7/16 Socket/Wrench

STEP 2

Place one of the Uprights on top of the Base, aligning the two holes on the Uprights to the holes on the base. Before adding the 2" Bolts, make sure the long extensions on the Uprights are facing the same direction as the Base legs as shown in Fig. 5.

Insert the 2" Bolts and attach the washers and nuts at the bottom of the base. Tighten and secure nuts.

Repeat for the second Upright.



STEP 3

Align the Top Rack holes to the top of the two Uprights and corresponding holes. Place 1 3/4" Bolts into each hole and attach the washers and nuts from the bottom of the Top Rack. Tighten and secure nuts.

Using the Zip-Tie, add the Product Placement Card that shows where product is placed on the cart.

